X-lite Configuration Guides

Yeastar Technology Co., Ltd.



Ensure that you have created the extension that you wish to use with the phone in MyPBX first. Take note of the Extension field and the password that you have entered for the extension.

SIP Accounts						
Enabled	Acct #	Domain	Username	Display Name	Add	
	1	192.168.5.150 (default)	500	500		
					Remove	
					Properties	
					Make <u>D</u> efault	
					Close	

Figure 1-1

Configuring a SIP account in X-Lite

1. Now start up X-Lite. The first time you start it up, it will bring up the 'Sip Accounts' dialog. Click 'Add' to create a new account.

Properties of Account 1						
Account Voicemail Topology Presence Advanced						
Display Name	500					
User name	500					
	300					
Password	********					
Authorization user name	500					
Domain	192.168.5.150					
Domain Proxy						
Register with domain and receive incoming calls						
Send outbound via:						
(i) domain						
proxy Address						
Dialing plan	#1\a\a.T;match=1;prestrip=2;					
确定 取消 应用 (<u>A</u>)						



Figure 1-2

SIP account properties

- 1) Now enter a Display name.
- 2) In the User name field, enter the extension number.
- 3) In the Password field enter the SIP password.
- 4) In the Authorized User name field, enter the extension number again.
- 5) In the 'Domain' field enter the Network address IP of MyPBX server.
- 6) In the Domain proxy section, ensure that you have selected 'Register with domain and receive inbound calls'. Select Target 'Domain'.
- 7) Click OK to save the account.

X-Lite showing successful registration with the phone system



Figure 1-3

8) X-Lite now tries to register with MyPBX. If successful, you will see a screen similar to the one in the screenshot.

<Finish>